

FIG. 1

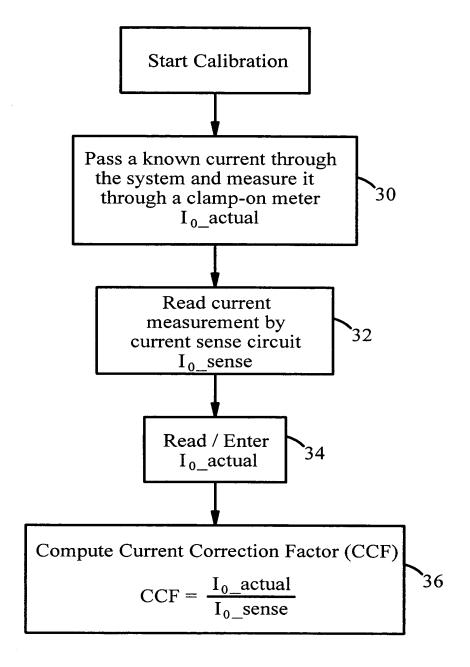


FIG. 2

Palm OS	
	Shunt Calibration
	1. Read Current [A] Present Calibration [%]
	Enter measured battery current[A]
	3. Calc. Calibration [%]
	Calibrate Clear Calib. Close
	0 0

FIG. 3

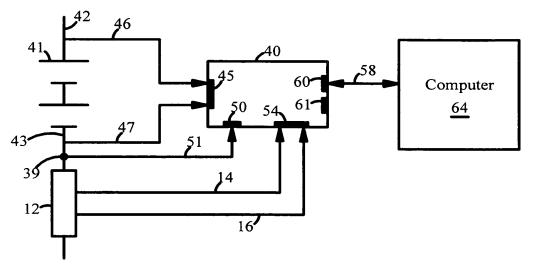


FIG. 4

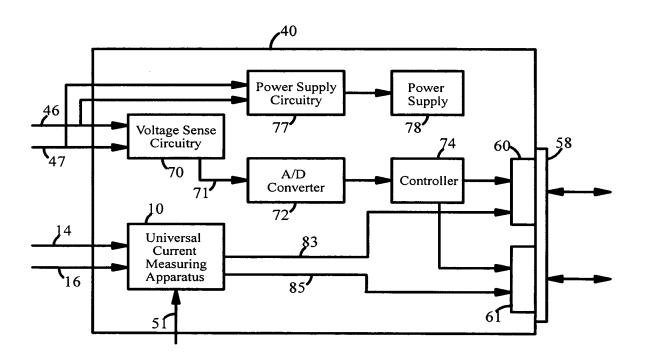


FIG. 5